




TORSION BOX DETAILS TOP FACE W/ CLEAT PLACEMENT

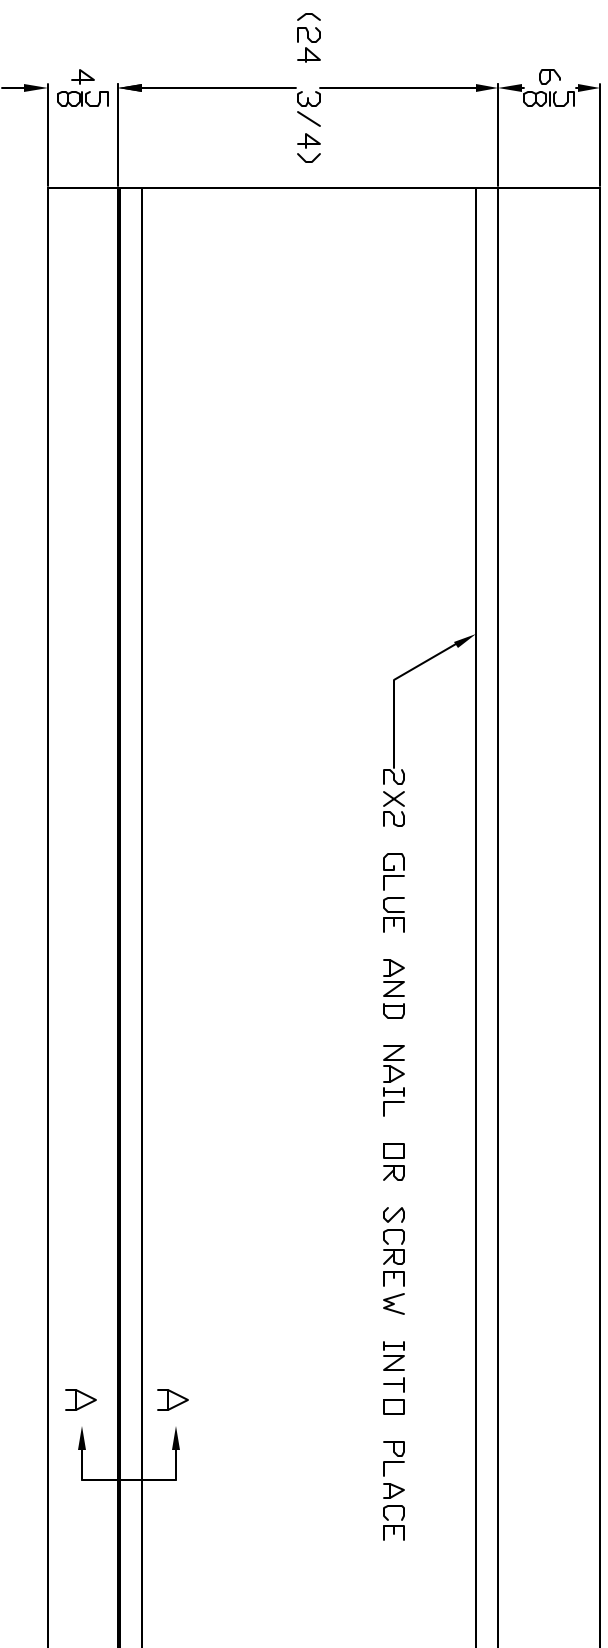


DETAIL A

TORSION BOX DETAILS BOTTOM WITH DADOES

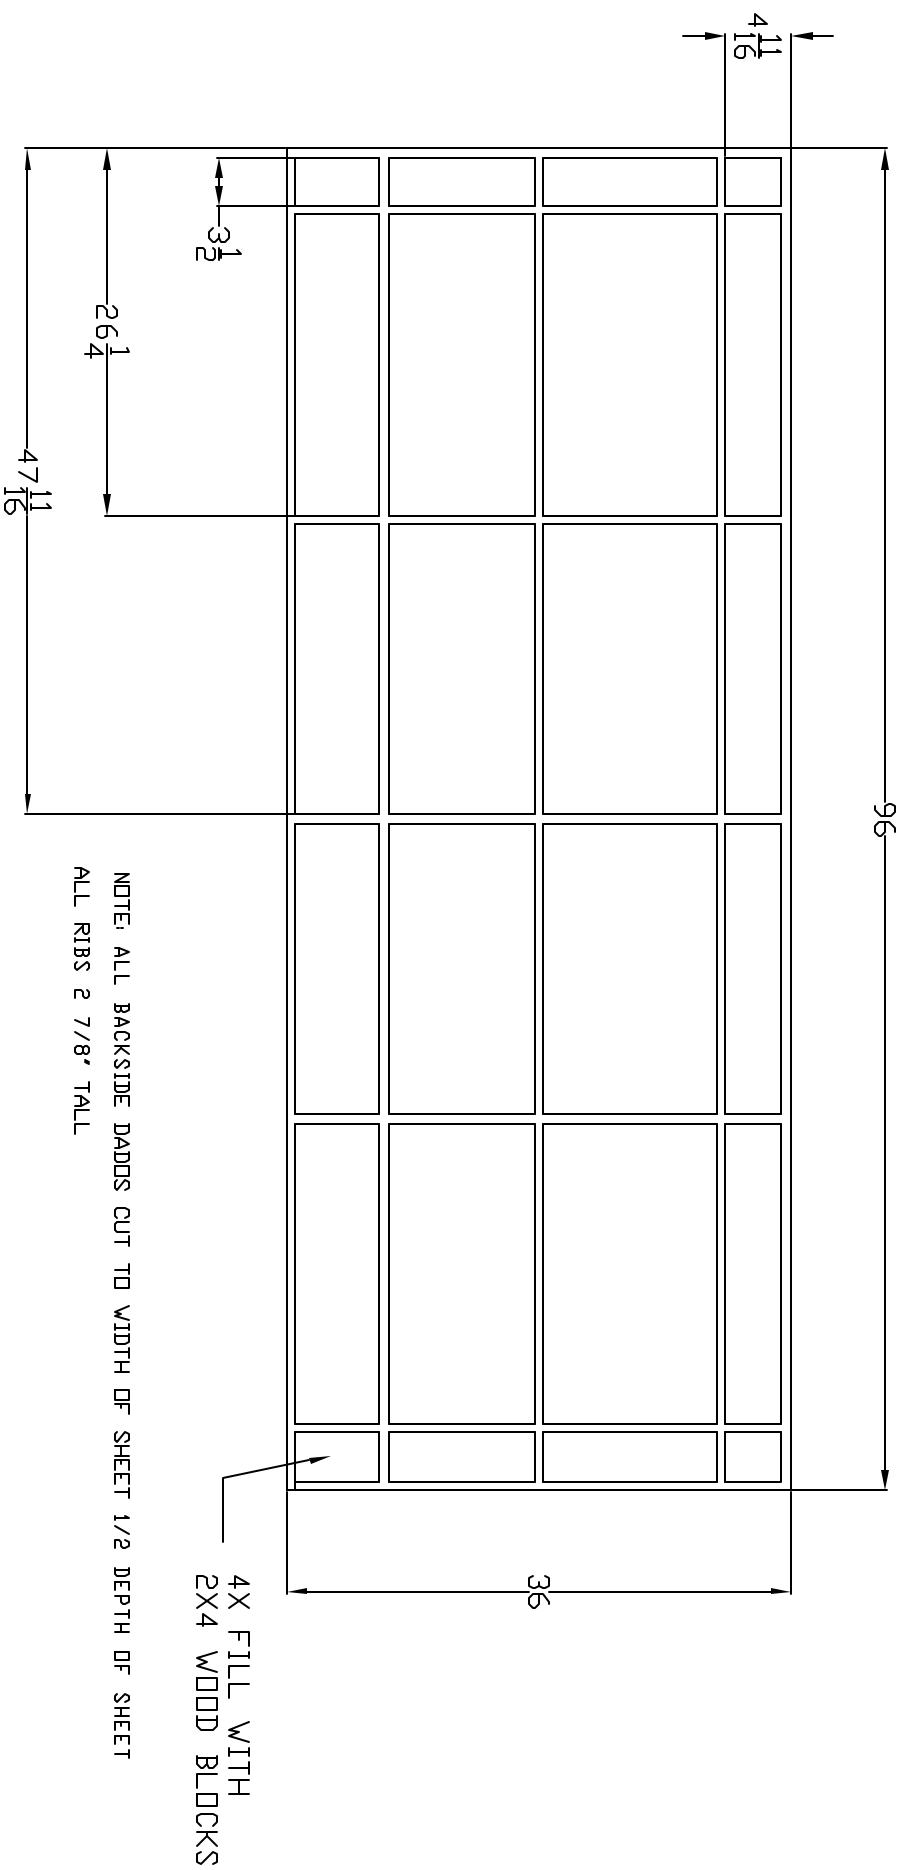


MATERIALS REQ: 2 4x8 SHEETS PLYWOOD
PLUS "SURPLUS SCRAP", SAME THICKNESS
ADD 1 4x4 SHEET IF NO SRAP AVAILABLE

BIN BOARDS

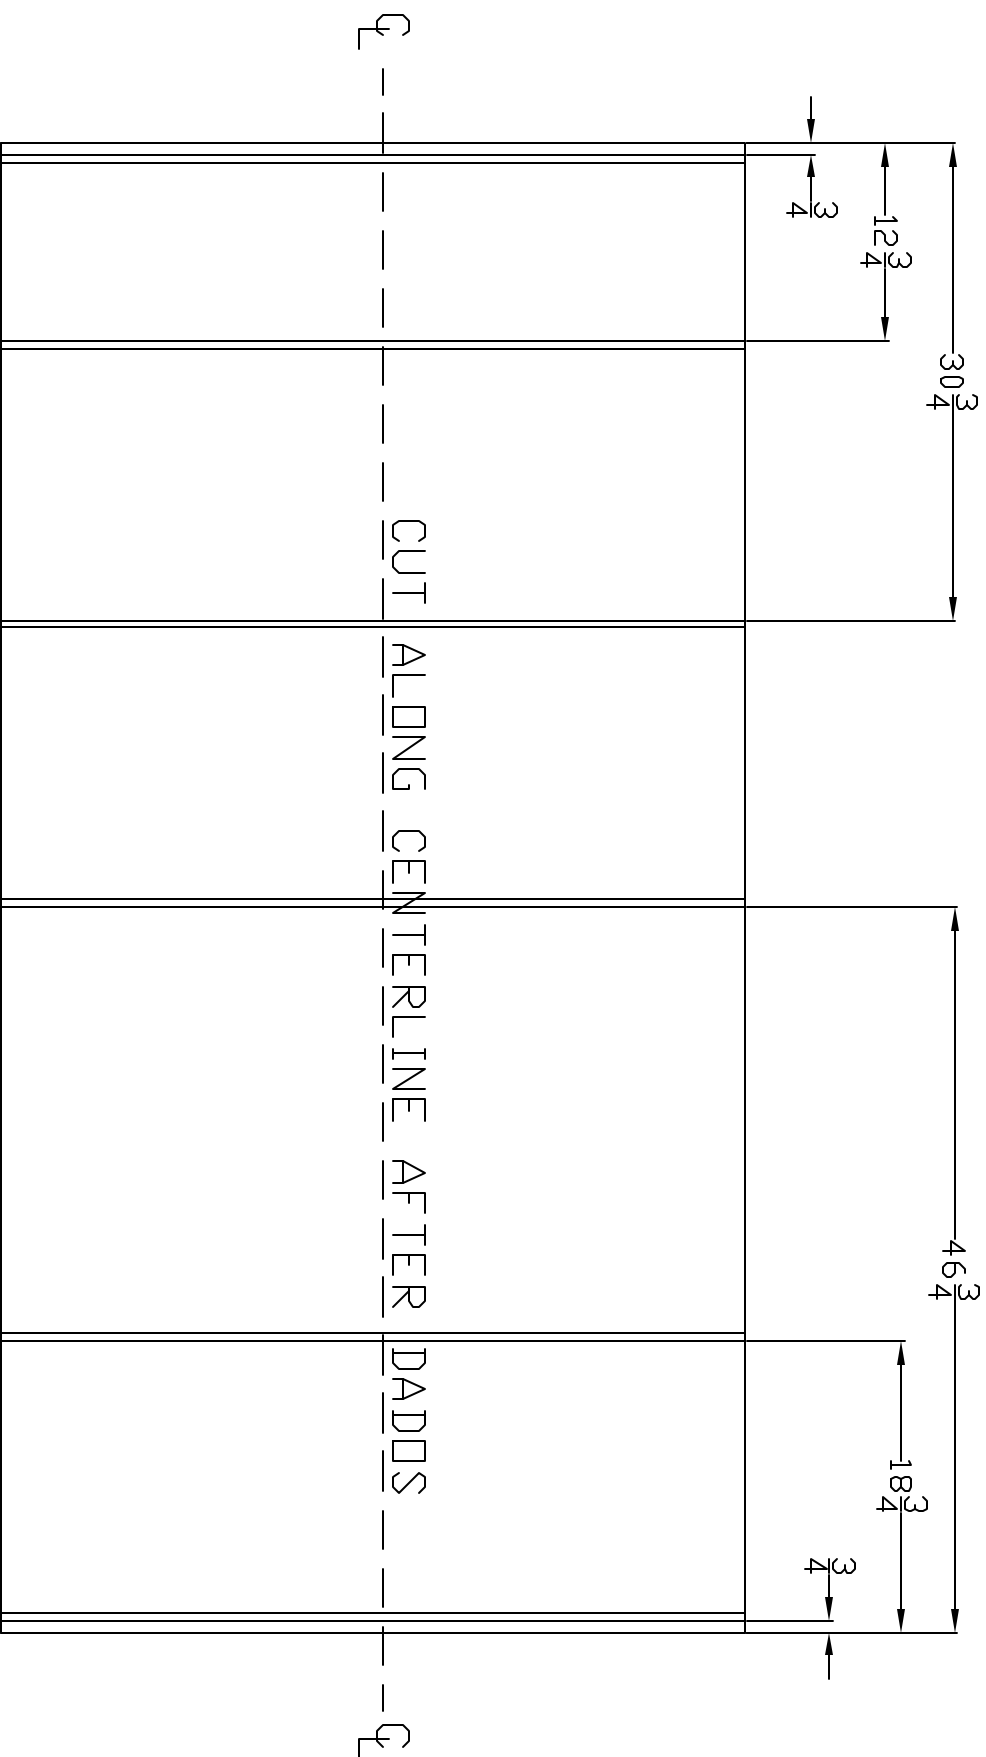


BIN ASSEMBLY


ATTACH 3 2X2'S AS SHOWN
BEFORE STARTING THIS
ASSEMBLY. SCREW AND GLUE
FROM OPPOSITE SIDE.

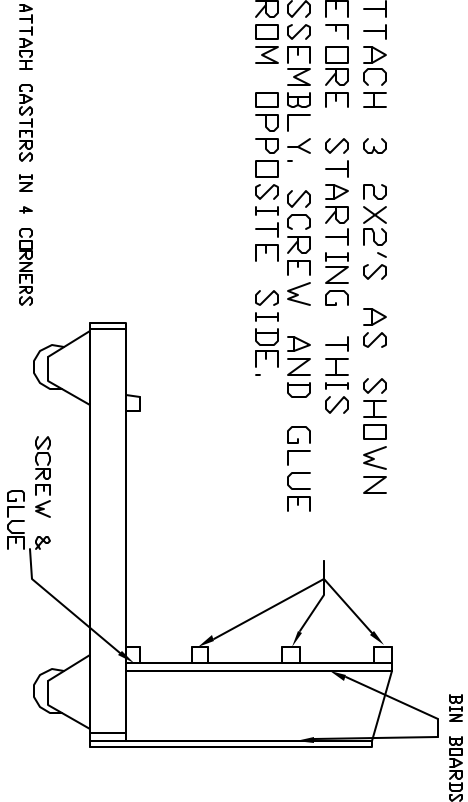


SIDE VIEW

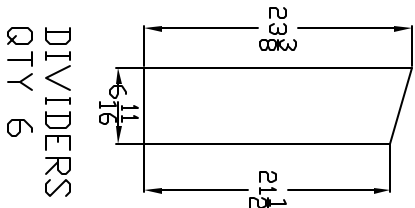


MATERIALS REQ: QTY 1 8' 2X4
SCRAP PLYWOOD FOR DIVIDERS
QTY 2 4" SWIVEL CASTERS
QTY 2 4" NON-SWIVEL CASTERS, WASHERS AND SCREWS

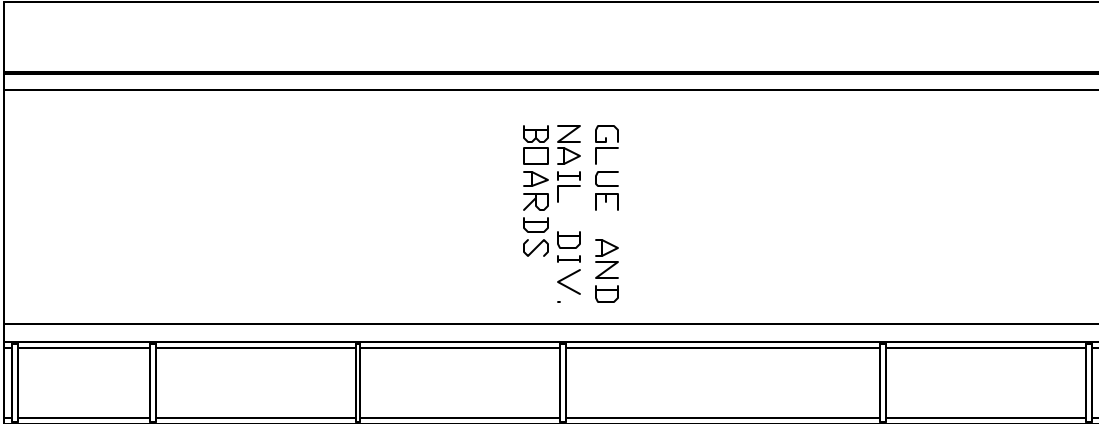



TOP VIEW

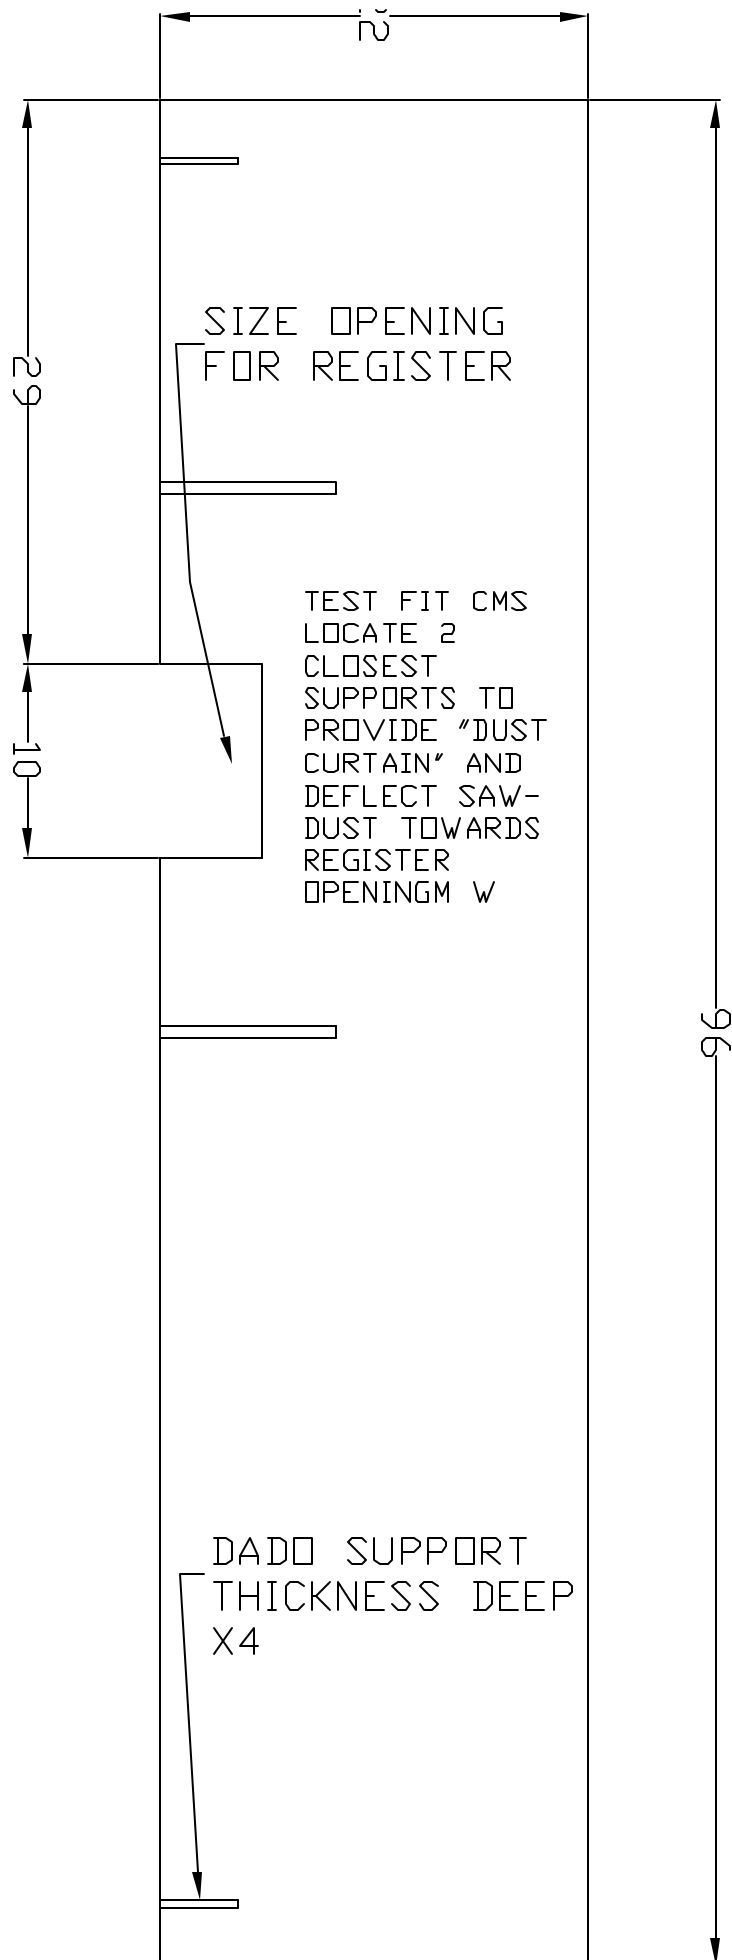

SHEET GOOD
STORAGE ASSY


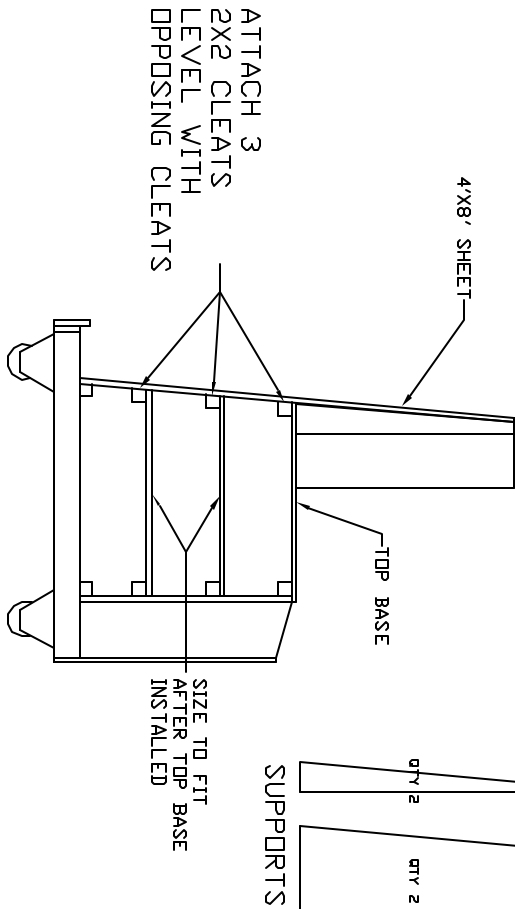


TOP VIEW

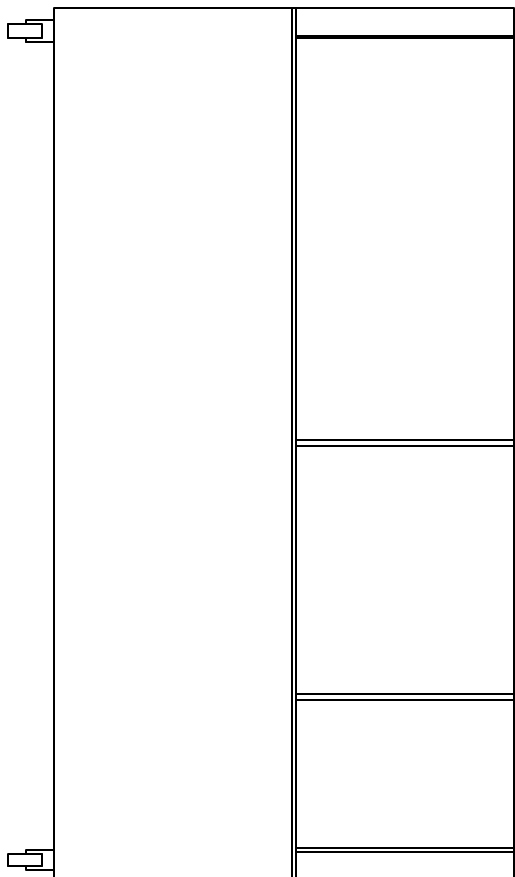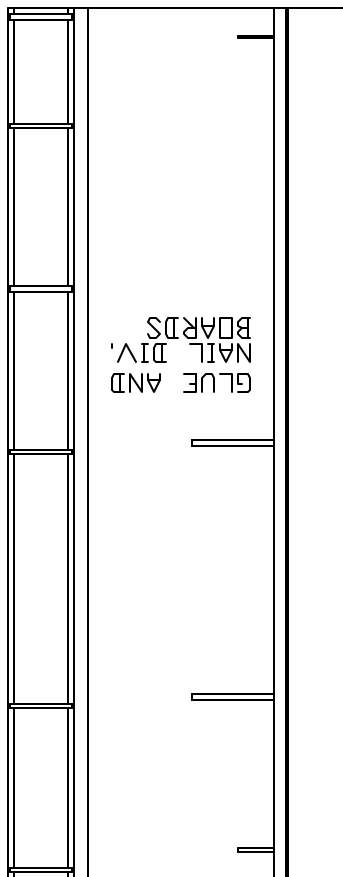


MATERIALS REQ: 3 SHEETS 4X8 PLYWOOD (INCLUDES TOP BASE), QTY 1 2X4

FENCE ASSEMBLY

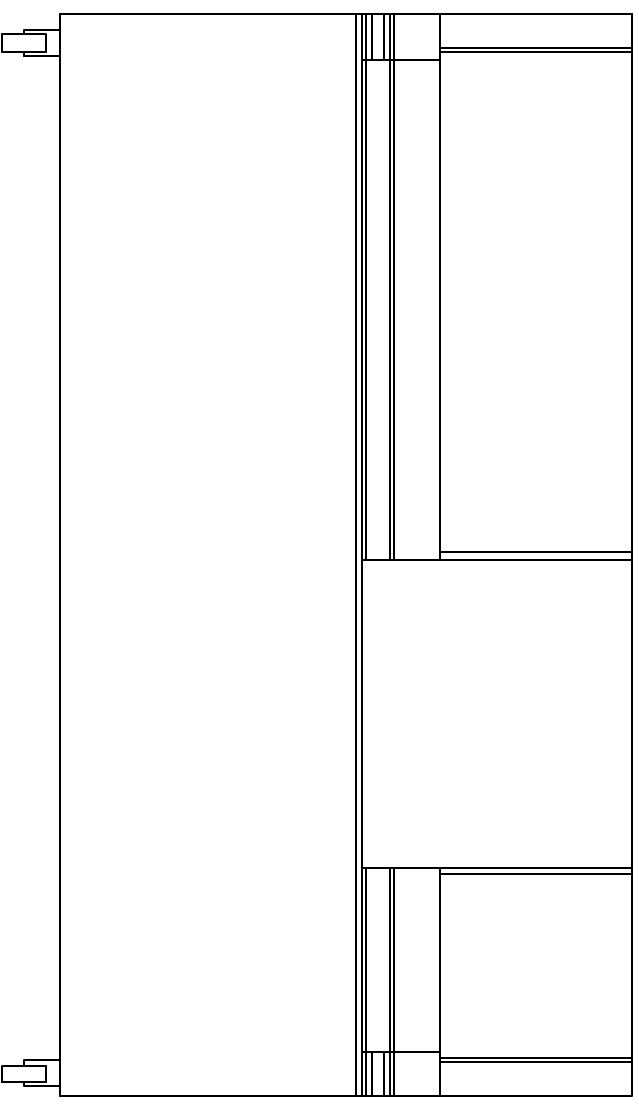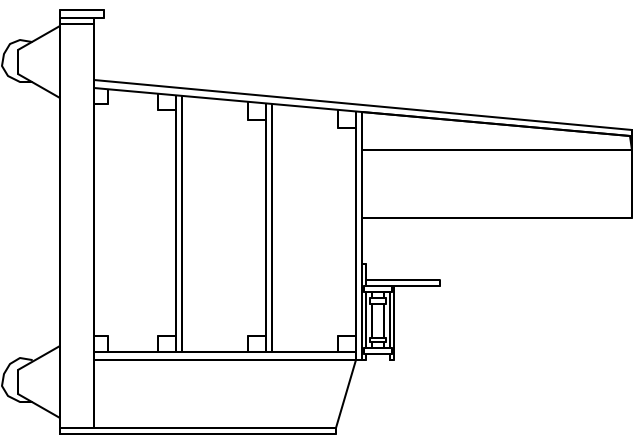


FENCE DETAILS

FENCE

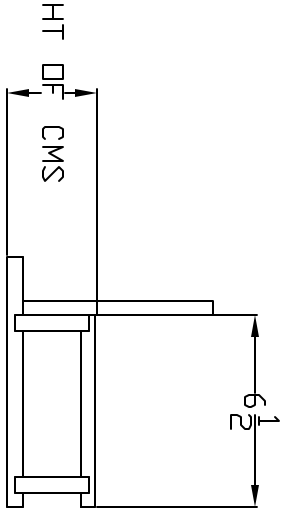

EXTENSION


STEP 1

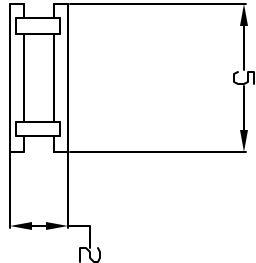


NOTE: MAKE
W & H TO
FIT SNUG
INTO FENCE
OPENING

EXTENSION

STEP 2

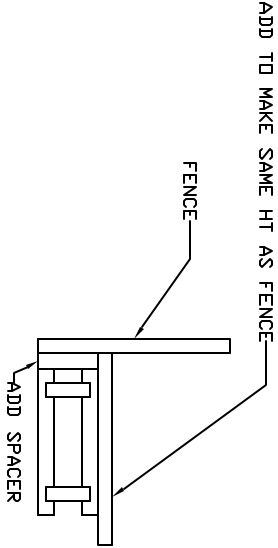

STEP 2

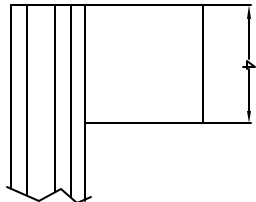

DUST COLLECTOR

