
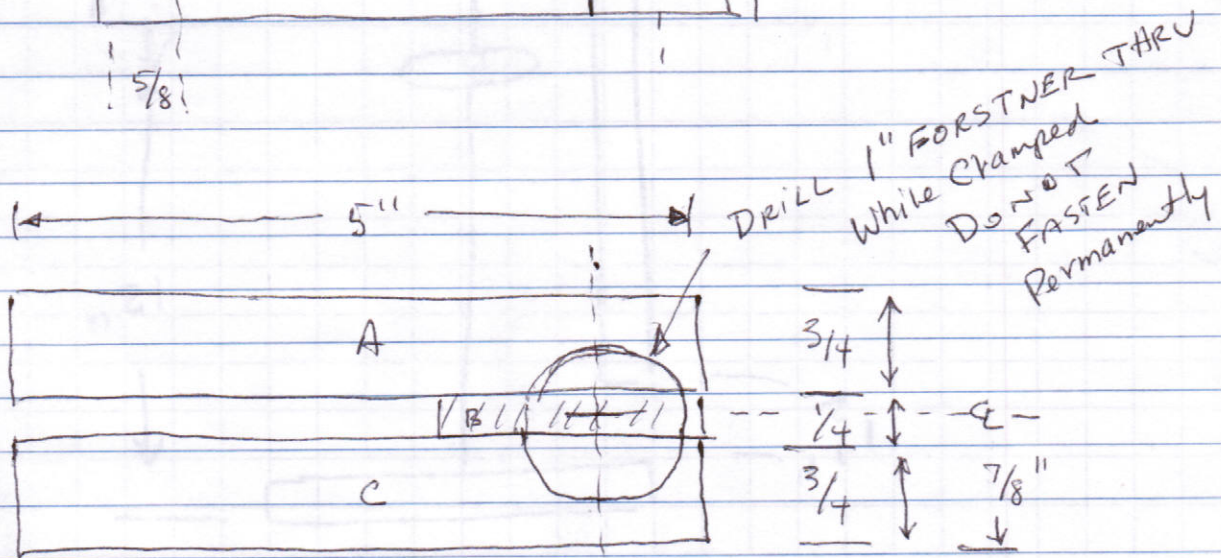


ODD ANGLE MITER CLAMP

Re
8/29/2020

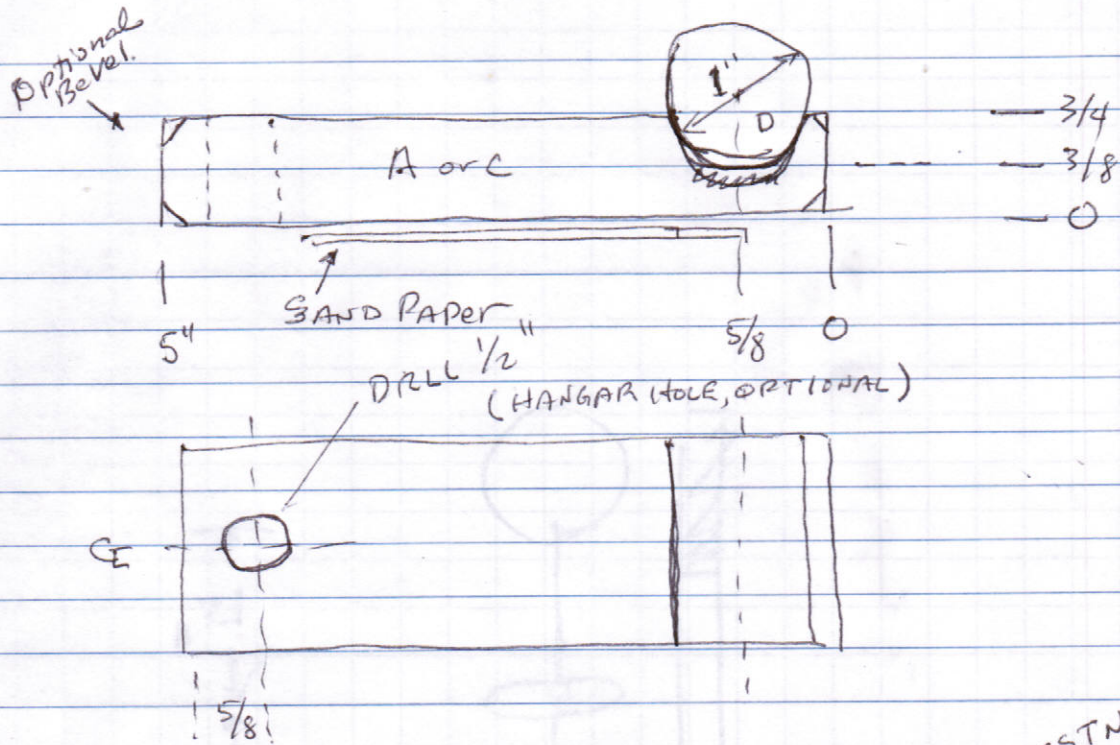

$$D = 1" \text{ Dowel} \times 1\frac{1}{2}" \text{ LONG.} \quad (2 \text{ EA})$$

$$A = 1\frac{1}{2}" \times 3/4" \times 5" \quad (2 \text{ ea})$$

$$B = 1\frac{1}{2}" \times 1/4" \times 2" \quad (\text{Scrap})$$

- 1 CLAMP A, B, C together before drilling 1" hole
- 2 GLUE DOWEL TO DRILLED A & C grooves.
- 3 GLUE SANDPAPER (NORMAL WOOD GLUE) to bottom.
- 4 DISCARD "B" pieces.

$$\begin{array}{r} 367 \\ 116 \overline{) 90.45} \\ \underline{331} \\ 58 \\ \underline{58} \\ 0 \end{array}$$