

RYOBI. INSTALLATION INSTRUCTIONS

4060305 RAPID SET ACCESSORY FOR USE WITH BT3000 TABLE SAW

CONGRATULATIONS! THANK YOU FOR BUYING THE RAPID SET ACCESSORY FOR THE RYOBI BT3000 10" TABLE SAW. WHEN USED IN ACCORDANCE WITH THESE INSTRUCTIONS, THIS ACCESSORY ENABLES YOU TO USE YOUR PRECISION CUTTING SYSTEM WITH EVEN GREATER CONFIDENCE AND ACCURACY.

The Rapid Set Accessory to the Ryobi BT3000 Table Saw enables fine-tune adjustment to the Rip Fence. An indicator is provided to indicate movement of the Rip Fence in 1/64" increments. This instruction sheet will guide you in the installation and use of your new accessory.




WARNING: READ THESE INSTRUCTIONS AND THE INSTRUCTIONS FOR YOUR BT3000 TABLE SAW BEFORE USING THIS RAPID SET ACCESSORY.

WARNING: ALWAYS UNPLUG YOUR TABLE SAW BEFORE INSTALLING ANY ACCESSORIES. ACCIDENTAL STARTING COULD RESULT IN SERIOUS INJURY.

INSTALLATION

1. Unplug your BT3000 10" Table Saw.
2. Remove Rip Fence from the saw.
3. Remove the plastic end plug from the front rail.
4. Align with locking knob forward and adjustment knob to the right.
5. Insert Rapid Set Accessory into the front rail, taking care to make sure flange hook and flange at bottom of Rapid Set fit smoothly in the extrusion of the front rail. See Figure 1.
6. Reattach Rip Fence so that right edge of Rip Fence Bracket engages the hook of the flange hook. See Figure 2. Without the Rip Fence engaging the flange hook of the Rapid Set, the Rapid Set Accessory will be inoperable.
7. Locate Rip Fence in the approximate desired position. The Rapid Set Accessory will allow approximately 1-3/8" travel/adjustment from its mounted position.

8. Tighten the locking knob until Rapid Set Accessory is anchored against the front rail. See Figure 3.

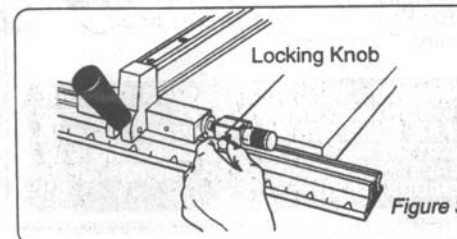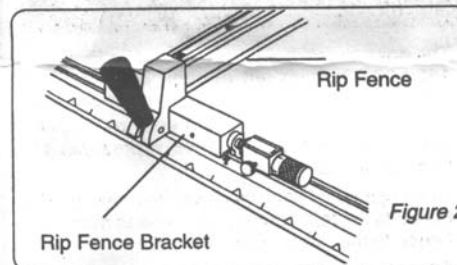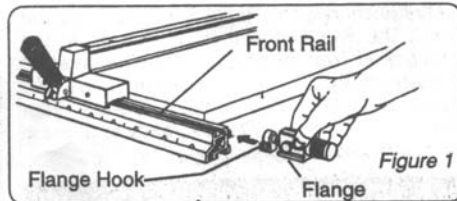

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

RYOBI. INSTALLATION INSTRUCTIONS (Cont.)

4060305 RAPID SET ACCESSORY FOR USE WITH BT3000 TABLE SAW

OPERATION




Your Rapid Set Accessory can make fine-tune adjustments in the location of the Rip Fence. An indicator is provided to indicate movement of the Rip Fence in 1/64" increments. To maximize the accuracy of the Rapid Set Accessory, carefully follow the instructions below.

1. After anchoring the Rapid Set to front rail and with the Rip Fence locking handle in the unlocked (up) position, (See installation instructions on reverse page), turn the adjustment knob until you feel no slack. Your Rapid Set Accessory is now ready to assist in making precise adjustments.

WARNING: MAKING ADJUSTMENTS WITHOUT UNLOCKING RIP FENCE MAY RESULT IN DAMAGE TO THE RAPID SET ACCESSORY.

2. The adjustment knob moves the Rip Fence 1/16" (.063 inches) left or right per complete revolution. Each 1/4 turn of the adjustment knob corresponds to 1/64" of Rip Fence movement. (Each black line on the knob represents 1/4 turn.) See Figure 4.
3. Turn adjustment knob clockwise to move the Rip Fence to the left, counterclockwise to move Rip Fence to the right. See Figure 5.
4. After desired adjustments have been made, reengage Rip Fence Locking Handle to secure Rip Fence at desired position before making cuts. See Figure 6.

WARNING: BEFORE PLUGGING IN YOUR BT3000 TABLE SAW TO MAKE TEST CUTS, MAKE SURE THE SWITCH IS IN THE OFF POSITION AND THE SAW BLADE GUARD IS IN PLACE. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.

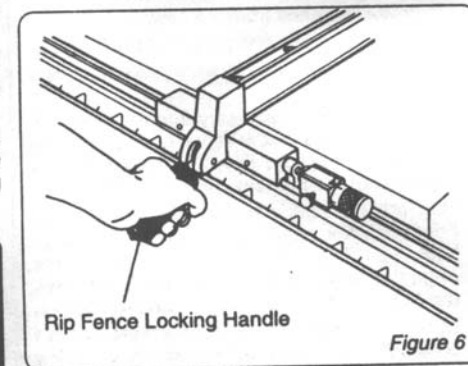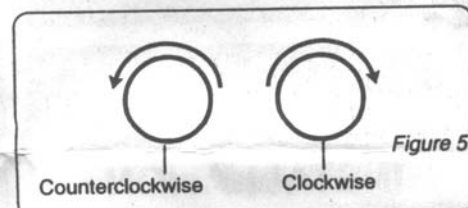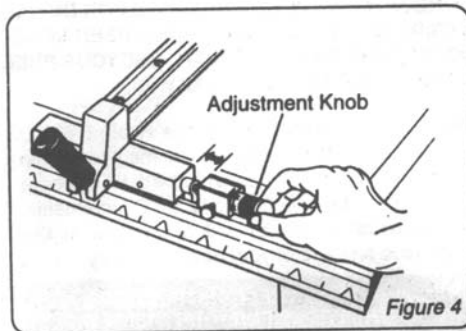

RYOBI AMERICA CORP.

5201 Pearman Dairy Road Anderson SC 29625-8950
Post Office Box 1207 Anderson SC 29622-1207
Phone 1-800-525-2579

RYOBI CANADA INC.

P.O. BOX 910
Cambridge, Ontario N1R 6K2
Phone 1-800-265-6778